





# ASSEMBLY INSTRUCTION

## opticalCON | LC Transceiver Adapter

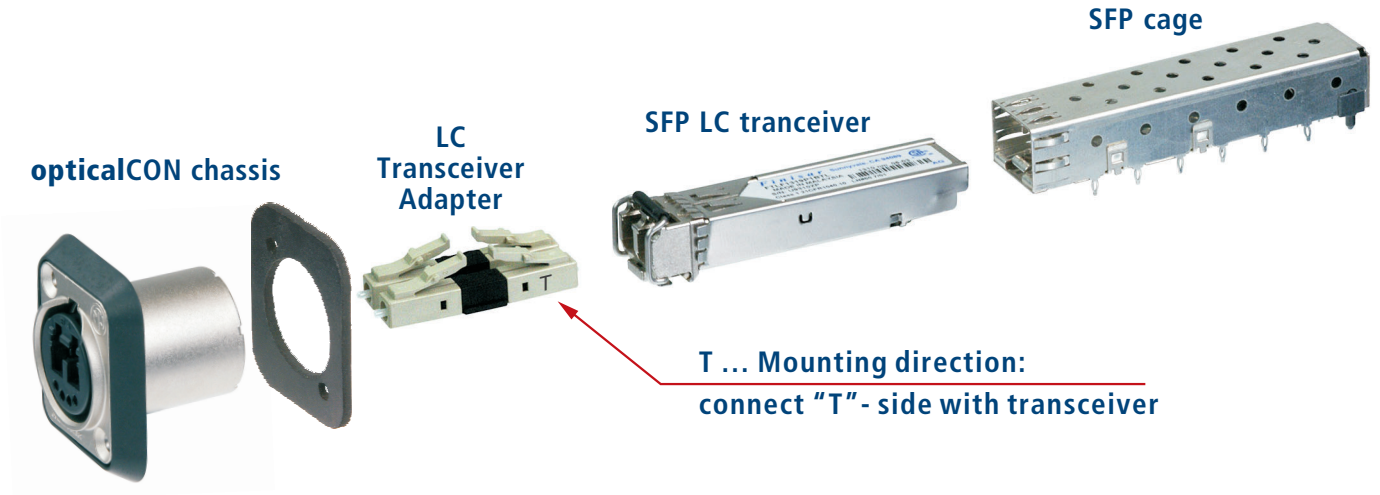

### SFP cage preparation:

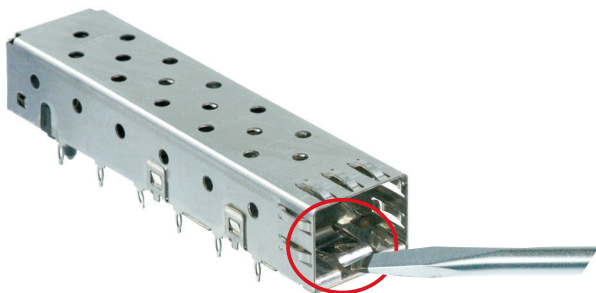

Remove SFP cage locking device

The SFP LC transceiver can be removed together with adapter and opticalCON chassis connector (e.g. Repair) when the SFP cage locking device is disabled.


#### Assembly:

Chassis connector > colored gasket > flat gasket > panel

Please note:

Use of flat gasket depends on length X from LC-latch shoulder to rear of transceiver (see table below). Always use colored gasket.

Fastening torque for mounting screws: 0.3 Nm

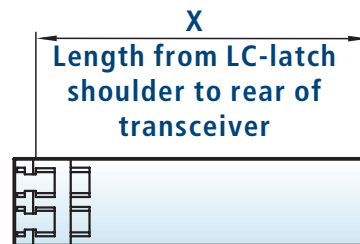

Transceiver

X = 50.3 mm - 51.2 mm	without flat gasket
X = 51.3 mm - 52.2 mm	with flat gasket 1 mm
X = 52.3 mm - 53.2 mm	with flat gasket 2 mm
X = 53.3 mm - 54.2 mm	with flat gasket 1 + 2 mm

Find detailed info on the customer drawing @ [www.neutrik.com](http://www.neutrik.com)

NEUTRIK AG LI T: +423 / 237 24 24 F: +423 / 232 53 93  
 NEUTRIK Zürich AG CH T: +41 44 / 736 5010 F: +41 44 / 736 5011  
 NEUTRIK USA Inc. USA T: +1 732 / 901 9488 F: +1 732 / 901 9608  
 NEUTRIK (UK) Ltd. UK T: +44 1983 / 811 441 F: +44 1983 / 811 439

NEUTRIK Vertriebs GmbH DE/NL/AT T: +49 8131 / 280 890 F: +49 8131 / 280 830  
 NEUTRIK France FR T: +33 1 / 4131 6750 F: +33 1 / 4131 0511  
 NEUTRIK Tokyo Ltd. JP T: +81 3 / 3663 4733 F: +81 3 / 3663 4796  
 NEUTRIK Hong Kong Ltd. HK T: +852 / 2687 6055 F: +852 / 2687 6052

Draft. Nr.: BDA 232 / 3102M1701 | Update: 26.11.2008 | Data subject to change without prior notice. ©2008NEUTRIK® . ALL RIGHTS RESERVED.

[www.neutrik.com](http://www.neutrik.com)

**NEUTRIK**